


BASE COURSE

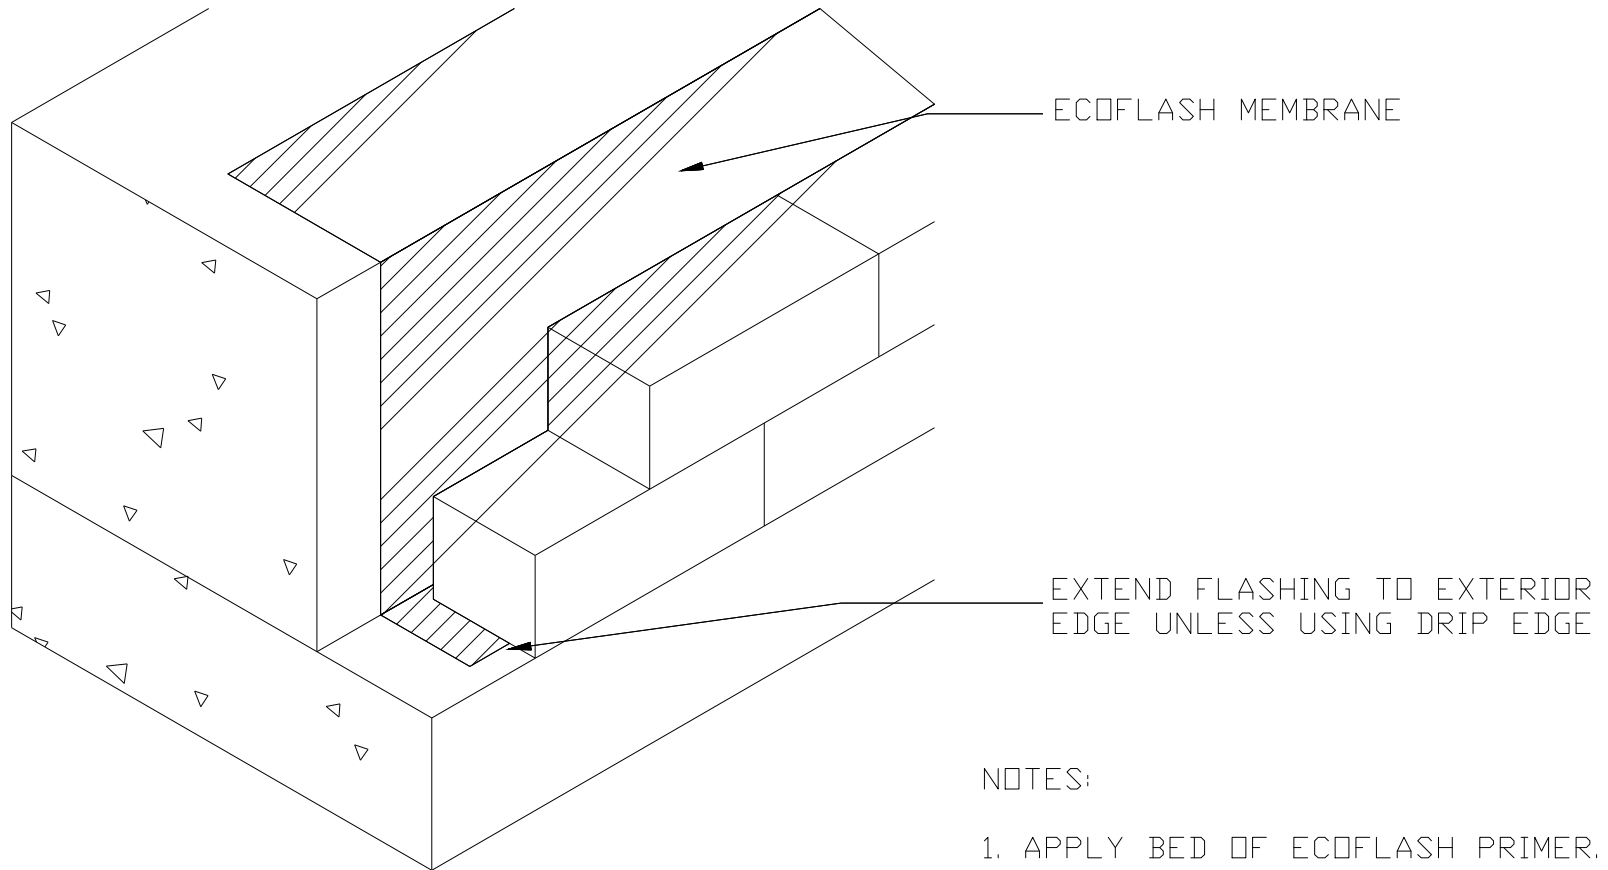

NOTES:

1. APPLY BED OF ECOFLASH PRIMER.
2. APPLY ECOFLASH TO EXTERIOR EDGE UNLESS USING DRIP EDGE.

Mar-flex Waterproofing & Building Products
500 Business Parkway
Carlisle, OH 45005
513-422-7285/800-498-1411
www.mar-flex.com

FD8/BC